Electric Drives

Hydraulics

Linear Motion and Assembly Technologies

Pneumatics

Service




# Variable vane pumps, pilot operated

**RE 10515/10.05** Replaces: 07.02

1/30

Type PV7

Sizes 14 to 150 Series1X Maximum operating pressure 160 bar Maximum flow 270 l/min

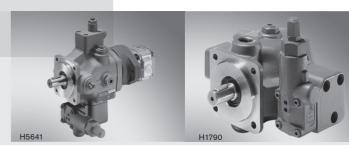

Type P2V7/...+ GF1/...

Type P2V7/16... C...

## **Table of contents**


Contents	Page
Features	1
Ordering code	2
Standard types, symbols	3
Function, section	4 and 5
Technical data	6
Characteristic curves	7 to 12
Unit dimensions, single pump with controller	13
Dynamic characteristics of the pressure control	14
Controller programme (symbols, characteristic curves	1
unit dimensions)	15 to 19
Lock	20
Notes on the engineering of multiple pumps	20
Combination options, ordering code of	
multiple pumps	21
Unit dimensions of pump combinations	22 to 27
SAE connection flanges	28
Engineering notes	28 and 29
Commissioning notes	29
Installation notes	30

Information on available spare parts: www.boschrexroth.com/spc

## **Features**

- Variable displacement
- Low operating noise
- Long service life due to hydrodynamically lubricated plain bearings
- Control of pressure and flow possible
- Low hysteresis
- Very short on and off-stroke times
- Mounting and connection dimensions to
  - VDMA 24560 part 1
  - ISO 3019/2
- Suitable for HETG and HEES media
- Standard single pumps of series PV7 can be flexibly combined to form multiple pumps
- PV7 pumps can additionally be combined with internal and external gear pumps, axial piston and radial piston pumps

## Ordering code

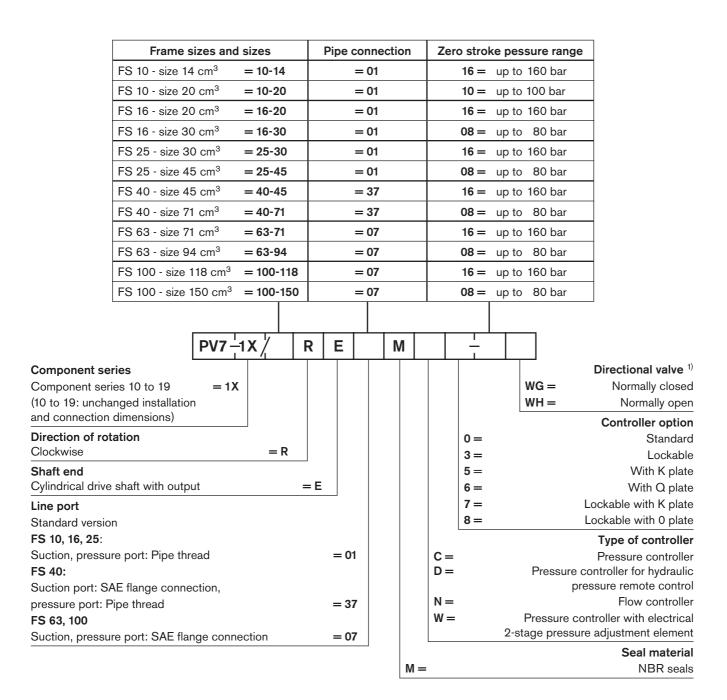

Order examples: PV7-1X/16-20RE01MC5-16

PV7-1X/40-45RE37MD0-16

#### Pump with custom setting:

Please state the required setting in clear text on the order (e.g.  $q_{Vmax} = 20$  l/min;  $p_{zero\ stroke} = 70$  bar). The pump will then be set to the desired values and the operating noise optimised accordingly.

Without indication in clear text, the flow and the zero stroke pressure will be set to the relevant maximum values and the operating noise optimised to these maximum values.

<sup>1)</sup> Only for C5, D5 and W controllers (optional)

# Standard types (available at short notice)


Туре	Material no.
PV7-1X/10-14RE01MC0-16	R900580381
PV7-1X/10-20RE01MC0-10	R900534143
PV7-1X/16-20RE01MC0-16	R900580382
PV7-1X/16-30RE01MC0-08	R900533582
PV7-1X/25-30RE01MC0-16	R900580383
PV7-1X/25-45RE01MC0-08	R900534508
PV7-1X/40-45RE01MC0-16	R900580384
PV7-1X/40-71RE01MC0-08	R900535588
PV7-1X/63-71RE01MC0-16	R900506808
PV7-1X/63-94RE01MC0-08	R900560659
PV7-1X/100-118RE01MC0-16	R900506809
PV7-1X/100-150RE07MC0-08	R900561846

Туре	Material no.
PV7-1X/10-14RE01MD0-16	R900504653
PV7-1X/10-20RE01MD0-10	R900906584
PV7-1X/16-20RE01MD0-16	R900509274
PV7-1X/16-30RE01MD0-08	R900560658
PV7-1X/25-30RE01MD0-16	R900509506
PV7-1X/25-45RE01MD0-08	R900568833
PV7-1X/40-45RE37MD0-16	R900593330
PV7-1X/40-71RE37MD0-08	R900539886
PV7-1X/63-71RE07MD0-16	R900519094
PV7-1X/63-94RE07MD0-08	R900574560
PV7-1X/100-118RE07MD0-16	R900532770
PV7-1X/100-150RE07MD0-08	R900915470

# **Symbols**



Single pump



Double pump

## Function, section

#### Design

Hydraulic pumps of type PV7 are vane pumps with variable displacement.

They basically consist of housing (1), rotor (2), vanes (3), stator ring (4), pressure controller (5) and adjustment screw (6).

The circular stator ring (4) is retained by the small reciprocating control piston (10) and the large reciprocating control piston (11). The third supporting point of the ring is height adjustment screw (7).

The driven rotor (2) rotates within stator ring (4). The vanes guided within the rotor are pressed against stator ring (4) by centrifugal force.


#### Adjustment

As pressure builds up in the system, the rear side of the small control piston (10) is always pressurised to system pressure via a channel.

In the displacement position, the rear side of the large control piston (11) is also pressurised to system pressure via a bore in control spool (14). Control piston (11) with the larger area holds stator ring (4) in its eccentric position.

The pump displaces fluid at a pressure below the zero stroke pressure set on pressure controller (5).

Control spool (14) is held by spring (13) in a certain position.

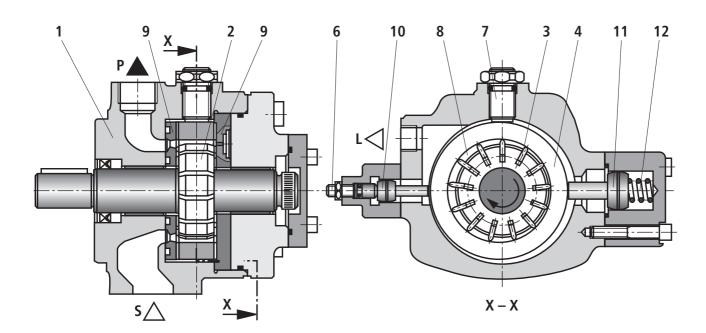

#### Suction and displacement process

The cells (8) required for transporting the fluid are formed by vanes (3), rotor (2), stator ring (4) and control plates (9).

To ensure the pump function during commissioning, stator ring (4) is held by spring (12) behind the large control piston (11) in its eccentric position (displacer position).

While rotor (2) is rotating, the volume of cells (8) increases and fill with fluid via suction channel (S). When the largest cell volume has been reached, cells (8) are disconnected from the suction side. As rotor (2) continues to rotate, they are connected to the pressure side, become smaller and displace fluid via pressure channel (P) into the system.

## **Function**

## Off-stroke control


When force  $F_{\rm P}$ , which results from the product of pressure  $\mathbf{x}$  area, exceeds counterforce  $F_{\mathrm{S}}$  of the spring, control spool (14) is pressed against spring (13). In this way, the chamber behind large control piston (11) is connected to the tank and thus unloaded.

The small control piston (10), which is constantly under system pressure, shifts stator ring (4) almost to the central position. The pump maintains the current pressure, the flow is reduced to zero and only leakages are compensated for.

Power losses and heating of the fluid are kept at a low level. The  $q_V$ -p characteristic curve runs vertically and shifts in parallel as higher pressures are set.

13

13

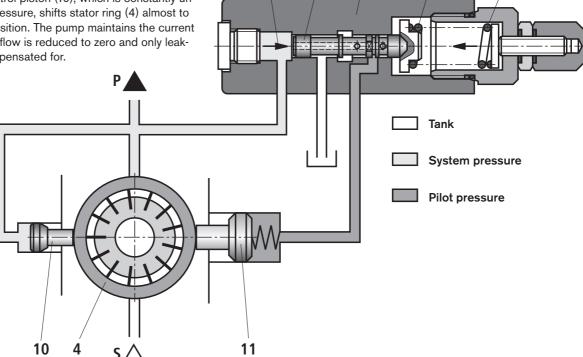


14

14

#### On-stroke control

When the pressure in the system falls below the set zero stroke pressure, spring (13) pushes control spool (14) back to its original position.

The large control piston (11) is again pressurised and shifts stator ring (4) to an eccentric position. The pump starts to displace again.

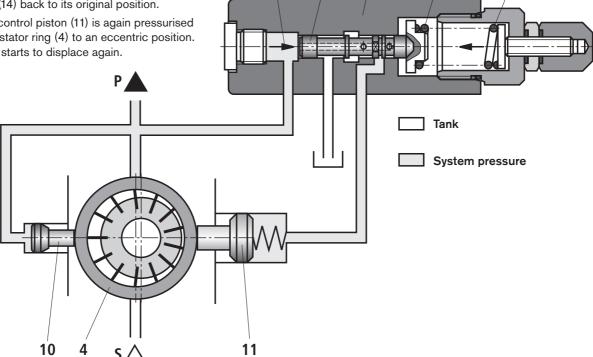

# Technical data (for applications outside these parameters, please consult us!)

Design			Pilot	operat	ted va	ne pun	np, var	iable						
Туре			PV7											
Type of mounting			4-hole flange (to VMDA 24560 part 1 and ISO 3019/2)											
Pipe connections			Pipe thread or SAE flange connection (depending on frame size)											
Installation orientation			Optio	onal, p	refera	bly hor	izonta	l (see	pages	28 an	d 29)			
Shaft loading			Radia	al and	axial f	orces (	canno	<b>t</b> be tr	ansmit	ted				
Direction of rotation			Cloc	kwise	(viewe	ed to sl	haft en	ıd)						
Drive speed n min <sup>-1</sup>			900	to 180	0									
Frame size		FS	1	0	1	6	2	5	4	0	6	3	10	00
Size	$V_{\rm g}$	cm <sup>3</sup>	14	20	20	30	30	45	45	71	71	94	118	150
Input power 1)	$P_{\text{max}}$	kW	6.3	5.8	8.5	6.8	13.7	10.2	20.5	16.5	33	20.9	51.5	33
Permissible input torque	$T_{\rm max}$	Nm	9	0	14	40	18	30	28	30	44	10	68	30
Max. flow <sup>2)</sup>	$q_{V}$	l/min	21	29	29	43.5	43.5	66	66	104	108	136	171	218
Leakage flow at zero stroke (at operating pressure output = $p_{max}$ )	$q_{ m VL}$	l/min	2.7	1.9	4	2.5	5.3	3.2	6.5	4	8	5.3	11	7.3
Operating pressure, absolute														
- Inlet	$p_{\text{min-max}}$	bar	0.8 to	2.5										
- Outlet 3)	$p_{\text{max}}$	bar	160	100	160	80	160	80	160	80	160	80	160	80
<ul> <li>Leakage outlet</li> </ul>	$p_{\max}$	bar	2											
Hydraulic fluid for operation at up to 160 bar (nominal pre	ssure)		HLP mineral oil to DIN 51524 part 2											
Special hydraulic fluids 4)														
<ul> <li>Up to operating pressu</li> </ul>	re $p_{\text{max}} = 1$	100 bar	HET	and H	EES ŀ	nydraul	lic fluic	ds to V	'DMA	24 56	8			
- Up to operating pressu	$re p_{max} = 8$	80 bar				DIN 51		•	(100	mm²/s	or hig	her)		
Hydraulic fluid temperature range	ϑ	°C	-10 1	to +70	; obse	erve pe	ermissi	ble vis	cosity	range	!			
Viscosity range	ν	mm <sup>2</sup> /s	16 to	160 a	ıt oper	rating t	emper	ature						
			max.	800 w	/hen s	tarting	up in	displa	cemer	ıt mod	е			
			max.	200 w	hen s	tarting	up in	zero s	troke r	node				
Max. permissible degree of contamination of the hydraulic fluid - cleanliness class to ISO 4406 (c)			Class	s 20/1	B/15 <sup>5)</sup>	)								
Weight (with pressure controller)	m	kg	12	2.5	1	7	2	1	3	0	3	7	5	6
Change of flow (with one turn of the adjustment screw and at n = 1450 min <sup>-1</sup> )														

 $<sup>^{1)}</sup>$  Measured at n= 1450  $\rm min^{-1}$  ;  $\rho=\rho_{\rm max}$  ;  $\nu=$  41  $\rm \,mm^2/s$ 

adhered to in hydraulic systems. Effective filtration prevents malfunction and, at the same time, prolongs the service life of components.

For the selection of filters, see data sheets RE 50070, RE 50076, RE 50081, RE 50086 and RE 50088.


<sup>&</sup>lt;sup>2)</sup> Due to manufacturing tolerances, the specified flow values can be exceeded by approx. 6 % (measured at  $n=1450~\rm min^{-1}$ ;  $p=10~\rm bar$ ;  $v=41~\rm mm^2/s$ ).

<sup>&</sup>lt;sup>3)</sup> The settable minimum pressure is approx. 20 bar; the factory setting is 30 bar as a standard.


<sup>&</sup>lt;sup>4)</sup> Further special hydraulic fluids (e.g. for plant in the food processing industry or flame-retardant fluids) on enquiry

<sup>5)</sup> The cleanliness classes specified for components must be

PV7/10-14

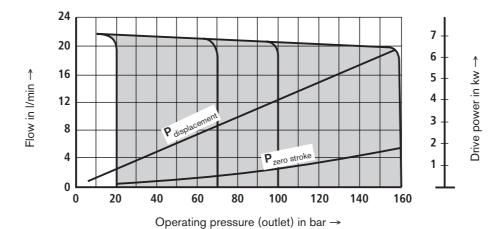

PV7/10-20

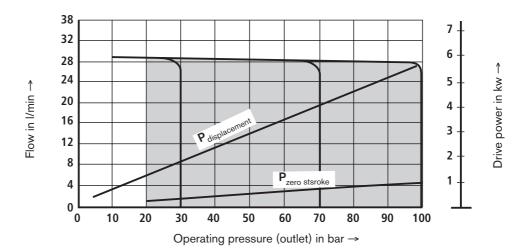

**Sound pressure level** measured in the anechoic chamber according to DIN 45635 part 26. Distance between microphone – pump = 1 m.


#### Please take this into account for the order!

The pump setting is selected so that the most favourable sound pressure level is obtained at the relevant highest zero


stroke pressure. It is therefore essential to specify the required zero stroke pressure on the order, unless it corresponds to the nominal pressure.

Observe engineering notes on page 28 and 30.

#### PV7/10-14

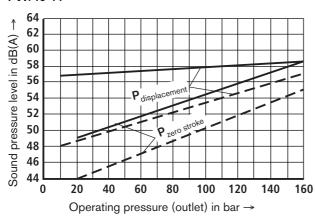


## PV7/10-20

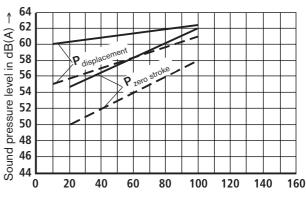


Operating pressure (outlet) in bar →

Drive speed:  $n = 1450 \text{ min}^{-1}$  $n = 1000 \text{ min}^{-1}$ 

PV7/16-20

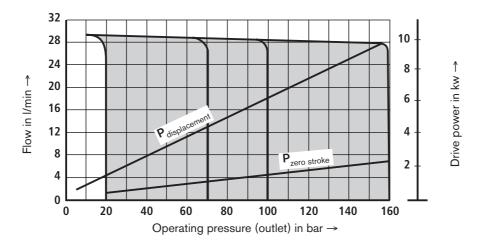

PV7/16-30

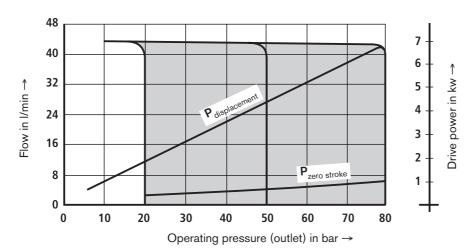

**Sound pressure level** measured in the anechoic chamber according to DIN 45635 part 26. Distance between microphone – pump = 1 m.


## Please take this into account for the order!

The pump setting is selected so that the most favourable sound pressure level is obtained at the relevant highest zero


stroke pressure. It is therefore essential to specify the required zero stroke pressure on the order, unless it corresponds to the nominal pressure.

Observe the engineering notes on pages 28 and 30.

## PV7/16-20

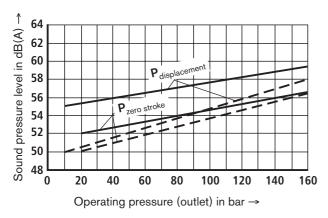


## PV7/16-30

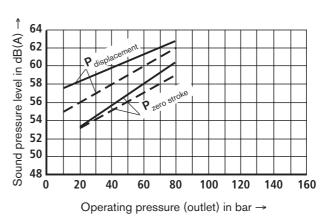


Drive speed:  $----- n = 1450 \text{ min}^{-1}$ 

\_\_ \_ n = 1000 min<sup>-1</sup>

PV7/25-30

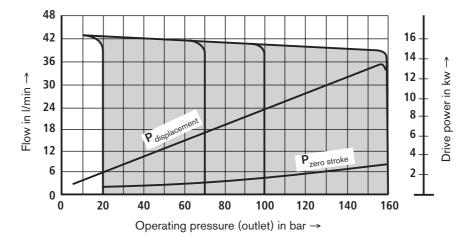

PV7/25-45

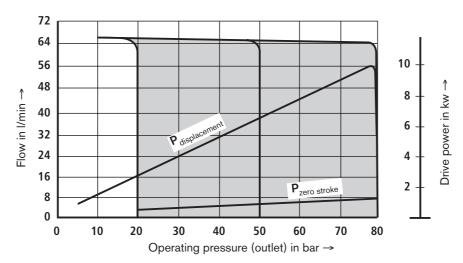

**Sound pressure level** measured in the anechoic chamber according to DIN 45635 part 26. Distance between microphone – pump = 1 m.


## Please take this into account for the order!

The pump setting is selected so that the most favourable sound pressure level is obtained at the relevant highest zero


stroke pressure. It is therefore essential to specify the required zero stroke pressure on the order, unless it corresponds to the nominal pressure.

Observe the engineering notes on pages 28 and 30.

## PV7/25-30

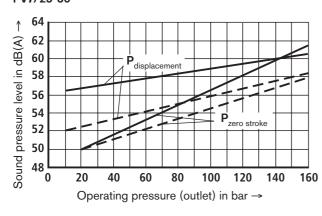


#### PV7/25-45

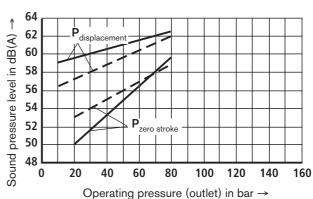


Drive speed:  $n = 1450 \text{ min}^{-1}$  $n = 1450 \text{ min}^{-1}$ 

PV7/40-45

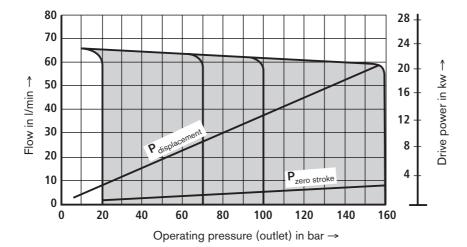

PV7/40-71

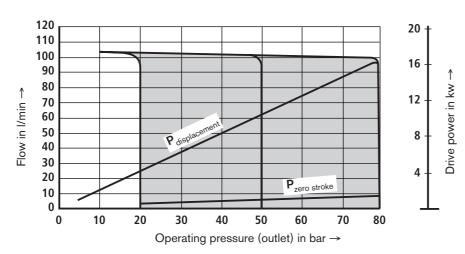

**Sound pressure level** measured in the anechoic chamber according to DIN 45635 part 26. Distance between microphone – pump = 1 m.


## Please take this into account for the order!

The pump setting is selected so that the most favourable sound pressure level is obtained at the relevant highest zero


stroke pressure. It is therefore essential to specify the required zero stroke pressure on the order, unless it corresponds to the nominal pressure.

Observe the engineering notes on pages 28 and 30.

## PV7/40-45

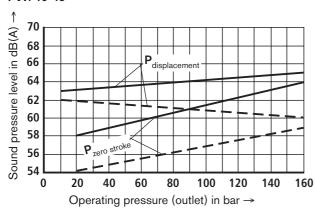


## PV7/40-71

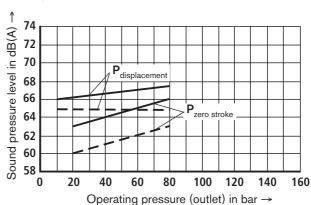


Drive speed:  $n = 1450 \text{ min}^{-1}$  $n = 1000 \text{ min}^{-1}$ 

PV7/63-71

RE 10515/10.05 | PV7

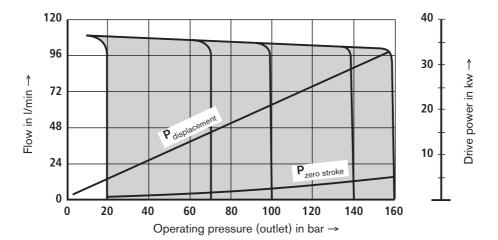

PV7/63-94

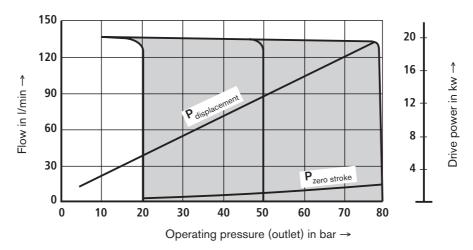

Sound pressure level measured in the anechoic chamber according to DIN 45635 part 26. Distance between microphone - pump = 1 m.


#### Please take this into account for the order!

The pump setting is selected so that the most favourable sound pressure level is obtained at the relevant highest zero


stroke pressure. It is therefore essential to specify the required zero stroke pressure on the order, unless it corresponds to the nominal pressure.

Observe the engineering notes on pages 28 and 30.

## PV7/63-71

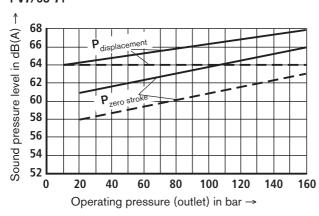


#### PV7/63-94

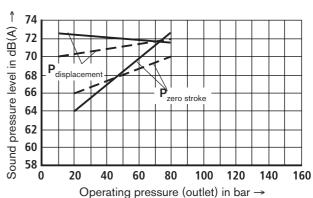


 $n = 1450 \text{ min}^{-1}$ Drive speed: -- -  $n = 1000 \text{ min}^{-1}$ 

PV7/100-118

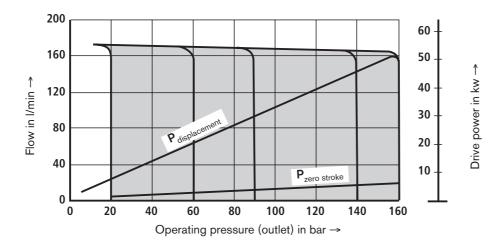

PV7/100-150

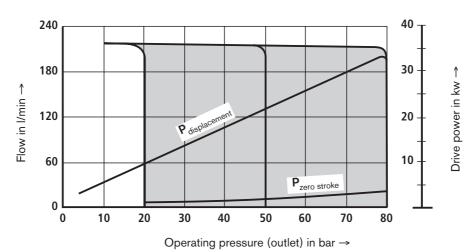

**Sound pressure level** measured in the anechoic chamber according to DIN 45635 part 26. Distance between microphone – pump = 1 m.


## Please take this into account for the order!

The pump setting is selected so that the most favourable sound pressure level is obtained at the relevant highest zero


stroke pressure. It is therefore essential to specify the required zero stroke pressure on the order, unless it corresponds to the nominal pressure.

Observe the engineering notes on pages 28 and 30.

#### PV7/100-118

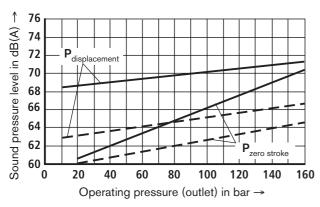

#### PV7/100-150

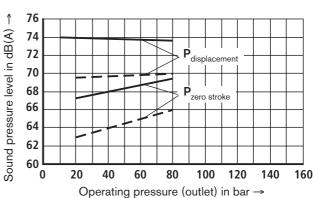


Drive speed:  $----- n = 1450 \text{ min}^{-1}$ 

$$- - n = 1000 \text{ min}^{-1}$$

## Unit dimensions (nominal dimensions in mm)

## Single pump with C, D and N controller

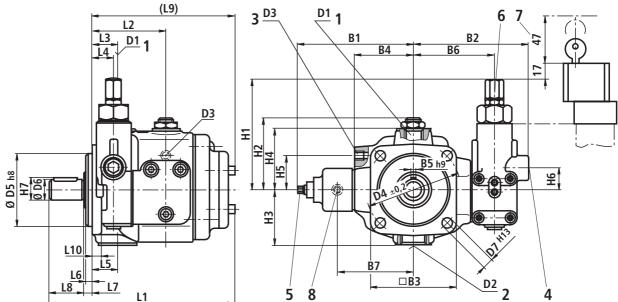

- 1 Pressure port 1)
- 2 Suction port 2)
- 3 Leakage port
- 4 In the case of a controller for hydraulic pressure remote control Ordering code ...D... and flow controller Ordering code ...N..., plug screw G1/4, 12 deep
- 5 Flow adjustment

Note on the adjustment:

- Turning clockwise: Reduction of the flow
- Turning counter-clockwise: Increase in the flow
- The set flow should not be less than 50 % of the maximum value

6 Pressure adjustment

Note on the adjustment:

- Turning clockwise: Increase in operating pressure
- Turning counter-clockwise: Reduction of the operating pressure

**Note:** The zero stroke pressure changes by approx. 19 bar with one turn of the adjustment screw.

- **7** Space required to remove the lock cover (the pressure can only be adjusted when the lock cover is removed)
- 8 Test point G1/4, 12 deep

FS	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	B1	B2	□ <b>B3</b>	B4	<b>B5</b> <sub>h9</sub>	В6	B7
10	193	78.5	26	22	26	7	8	36	149	9	130	125	96	65	6	90	88
16	217	86	37	20	37	9	10	42	165	10	134.5	131	120	69	8	93	92
25	229	86	34	20	38	9	10	42	177	10	140.7	137	120	75	8	99	98
40	254.6	86	26.5	21.5	43	9	10	58	186.6	12	157.8	161		94	10	125	115.5
63	279	99	39	34.5	51	9	10	58	211	13	163.7	165		100	10	130	121
100	334	111	45.5	28.5	60.5	9	10	82	242	16	191.7	184.5	200	121	12	149.5	150


FS	H1	H2	Н3	H4	H5	H6	H7	D1 1)	<b>D2</b> <sup>2)</sup>	D3	<b>D4</b> ±0,2	Ø <b>D5</b> <sub>h8</sub>	Ø <b>D</b> 6	<b>D7</b> H13
10	117	74	58	64	37	25	22.5	G1/2	G1	G1/4	103	80	20 <sub>i6</sub>	9
16	118.5	81.5	68	72	40	26.5	28	G3/4	G1 1/4	G3/8	125	100	25 <sub>i6</sub>	11
25	118.5	91.5	92	80	40	26.5	28	G1	G1 1/2	G3/8	125	100	25 <sub>i6</sub>	11
40	118	105.5	89	94	45	26	35	G1	SAE1 1/2"	G1/2	160	125	32 <sub>k6</sub>	14
63	118	111.5	105	100	47	26	35	SAE1 1/4"	SAE 2"	G1/2	160	125	32 <sub>k6</sub>	14
100	118	123.5	126	111	52	26	43	SAE1 1/2"	SAE2 1/2"	G3/4	200	160	40 <sub>k6</sub>	18

Frame sizes 10, 16, 25 and 40 Pipe thread "G..." to ISO 228/1 Frame sizes 163 and 100, flange connection to SAE

Frame sizes 110, 16 and 25 Pipe thread "G..." to ISO 228/1 Frame sizes 140, 63 and 100, flange connection to SAE

# Dynamic characteristics of the pressure control


## Test set-up

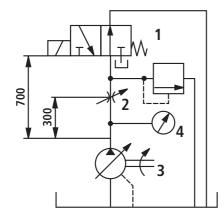

- 1 Directional valve (switching time 30 ms)
- 2 Throttle for adjusting the pressure during displacement
- 3 Hydraulic pump
- 4 Pressure measurement point


## Off-stroke control

 $q_{
m V \ displacement} 
ightarrow q_{
m V \ zero \ stroke}$ 

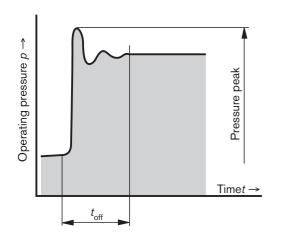

## On-stroke control

 $q_{\text{V zero stroke}} \rightarrow q_{\text{V displacement}}$ 

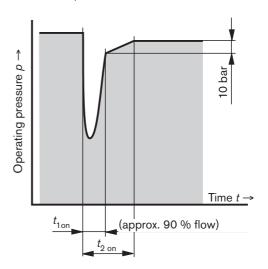

		Off-s	troke cor	ntrol time	in ms (av	erage va	lues)	On-stroke control time in ms (average values)					
	Control times		$q_{ m V~di}$	splacement	→ q <sub>V zero</sub>	stroke		$q_{ m Vzerostroke}  ightarrow q_{ m Vdisplacement}$					
	Control times	20 →	160 bar	20 →	80 bar	20 →	40 bar	160 →	130 bar	80 →	60 bar	40 → 30 bar	
		$t_{ m off}$	$p_{\text{max}}^{1)}$	$t_{ m off}$	$p_{max}$	$t_{ m off}$	$p_{\text{max}}$	t <sub>1 on</sub>	t <sub>2 on</sub>	t <sub>1 on</sub>	t <sub>2 on</sub>	t <sub>1 on</sub>	t <sub>2 on</sub>
	10-14	100	180	-	_	150	80	60	80	-	_	60	80
	10-20	_	-	100	130	150	100	_	_	60	80	50	100
	16-20	100	200	-	_	120	100	50	80	-	_	50	90
sizes	16-30	_	_	100	140	150	110	_	_	50	80	50	100
d Siż	25-30	100	220	-	_	120	120	80	100	-	_	70	100
s and	25-45	_	-	100	150	120	120	_	-	80	100	80	130
sizes	40-45	100	240	-	_	120	140	70	100	-	_	60	100
Frame	40-71	_	-	100	180	120	150	_	-	80	100	80	140
Fra	63-71	150	220 <sup>2)</sup>	-	-	150	180	80	120	-	_	100	140
	63-94	-	-	200	150 <sup>2)</sup>	220	150	_	-	120	150	130	210
	100-118	200	220 <sup>2)</sup>	-	-	250	200	100	150	-	_	150	250
	100-150	_	-	250	150 <sup>2)</sup>	280	150	-	-	150	200	180	280

<sup>1)</sup> Permissible pressure peaks

<sup>2)</sup> Pressure relief valve required for limiting pressure peaks


## Controller programme


#### C controller

## Pressure controller

with mechanical pressure adjustment, ordering code ...C0-... (in lockable version, ordering code ...C3-...)

#### Symbol

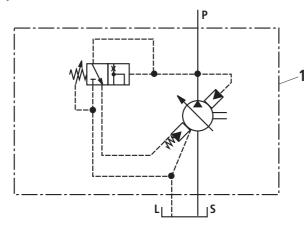

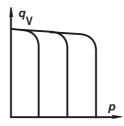

#### Order example:

1 Pump: PV7-1X/16-20RE01MC0-16 or PV7-1X/63-94RE07MC0-08


Spare controller V7-1X/...CO-16 Material no. R900540478


#### D controller

#### Pressure controller

with hydraulic pressure remote control, ordering code ...D0-... (in lockable version, ordering code ...D3-...)

#### Symbol

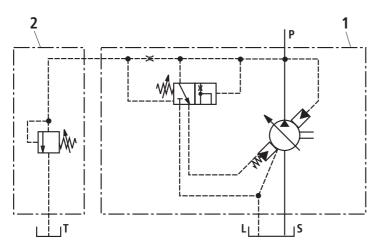



## Order example:

1 Pump: PV7-1X/25-45RE01MD0-08

2 Optional pressure relief valve; must be ordered separately

The remote control line between controller and pressure relief valve (2) should not be longer than 2 m.

**Note:** The zero stroke pressure results from the addition of the pressures set on the pump and on the pressure relief valve. The remote control port must not be plugged, since otherwise, the pump does not destroke!

Spare controller V7-1X/...DO-16

Material no. R900540596


## Controller programme


#### N controller

#### Flow controller

with mechanical flow adjustment, ordering code ...N0-... (in lockable version, ordering code ...N3-...)

## Symbol

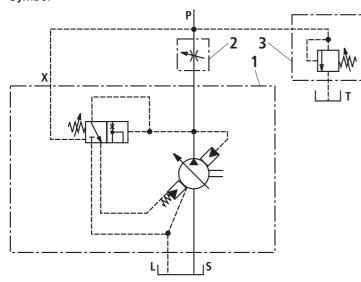

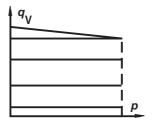

## Order example:

**1** Pump: PV7-1X/16-20RE01MN0-16 or PV7-1X/63-94RE07MN3-08

- 2 Optional metering orifice (e.g. throttle to RE 27219)
- 3 Optional pressure relief valve (this valve is required, since the control is not related to the zero stroke)

Items 2 and 3 must be ordered separately.

The control line between controller port "X" and the metering orifice should not be longer than 1.5 m.

Differential pressure approx. 13 bar

Spare controller V7-1X/...NO-16

Material no. R900543510

Hydraulics | Bosch Rexroth AG


## Controller programme

#### W controller

#### Pressure controller

with electrically switchable 2-stage pressure adjustment element, ordering code ...W0-...

## Symbol

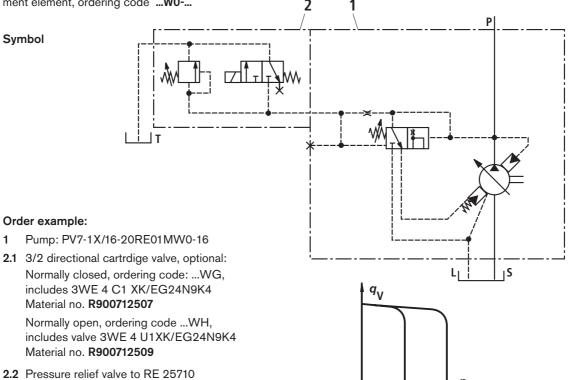

р

**B1** 

Unit dimensions (nominal dimensions in mm)

## W controller

Order example:

For further unit dimensions, see page 13.

Frame size	B1	H1	H2	
10	189	187.5	77.5	
16	192	189	79	
25	198	189	79	
40	224	188.5	8.5	P G1/4 <sup>\(\Sigma\)</sup>
63	229	188.5	8.5	
100	248.5	188.5	78.5	

## Controller programme

## Hydraulic start-up aid (K plate) Sandwich plate

with unloading valve for starting up at lowest zero stroke pressure.

Zero stroke pressure approx. 20 bar (depending on application)


Ordering code: ...5-...


(in lockable version, ordering code ...7-...)

#### Note

Not suitable as 2-stage control!

#### **Symbol**

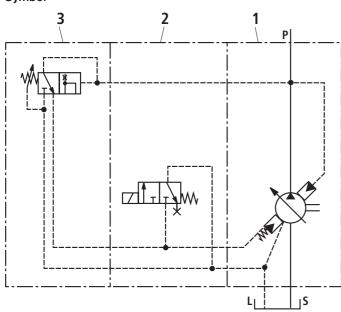

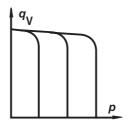

#### Order example:

- 1 Pump: PV7-1X/40-71RE37MC5-08
- 2 3/2 directional cartridge valve, optional:

Normally closed, ordering code: ...WG, includes valve 3WE 4 C1 XK/EG24N9K4 Material no. **R900712507** 

Normally open, ordering code ...WH, includes valve 3WE 4 U1XK/EG24N9K4 Material no. **R900712509** 

The figure shows type ...WG

3 Optional C, D or N controller

#### Accessories for conversions


From controller variant ...0-... to ...5-...:

Plate V7-1X/.K, material no. R900854415

## Unit dimensions (nominal dimensions in mm)

## K plate

For futher unit dimensions, see page 13.

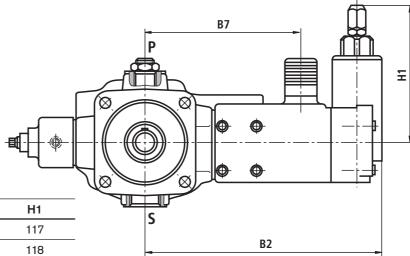

Frame size	B2	В7	H1		
10	204.5	143.5	117		
16	207.5	146.5	118		
25	214	153	118		
40	240	179	118		
63	244.5	183.5	118		
100	264	203	118		

## Controller programme

#### Flow/pressure controller (Q plate)


#### Sandwich pump


- For combining a flow controller with a pressure-compensated pump
- With built-on standard flow controller

Ordering code: ...6-...

(in lockable version, ordering code ...8-...)

## Symbol

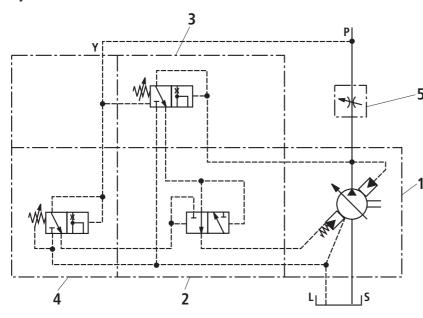

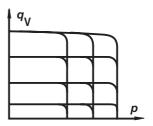

#### Order example:

- 1 Pump: PV7-1X/63-712RE07MC6-16
- 2 Sandwich plate for combining the pressure controller and the flow controller function
- 3 Flow controller as described on page 16
- 4 Pressure controller optionally of types C, D, E or W as described on pages 15 and 16
- **5** Optional metering orifice (e.g. throttle to RE 27219), must be ordered separately

The control line between controller port "Y" and the metering orifice should not be longer than 1.5 m.

Accessories for conversions
From controller variant ...0-... to ...6-..., includes items 2 and 3:

Plate V7-1X/...Q


Material no. R900860093

## Unit dimensions (nominal dimensions in mm)

#### Q plate

For further unit dimensions, see page 13.

Frame size	B2	H1
10	173.5	117
16	176.5	118.5
25	182.5	118.5
40	208.5	118
63	213.5	118
100	233	118

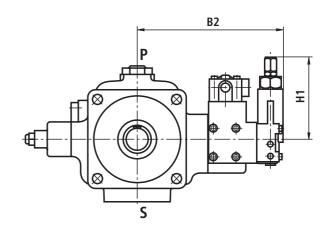

#### Lock

#### Material no.: R900844598

This lock is included in the scope of supply for pumps with controller options of versions ...3..., ...7... or ...8...


#### **Functional description**

After unlocking (by turning the key clockwise) the complete lock cover can be removed from the controller, which allows free access to the adjustment element.

To lock, the lock cover must be placed over the controller adjustment element and pressed home, the lock cylinder pressed down and the key turned to the left.


#### The lock can be easily retrofitted to a standard pump.

- Unscrew the cap nut from the controller adjustment element.
- Fit the cap nut that is provided with the key
- Plug on the lock as shown in the functional description.

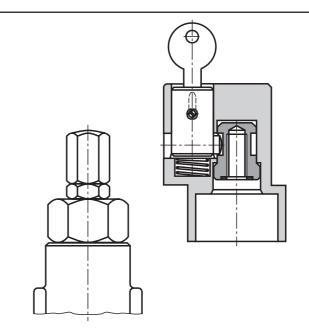

## Notes on the engineering of multiple pumps

- PV7 pumps can be combined as a standard. Each pump is fitted with a splined, second shaft end.
- When the PV7 is operated as fixed displacement pump, the fixed displacement pump must be used as rear pump.
- The general technical data are the same as that of the single pump (see page 6).
- The pump that is subjected to higher loads (pressure x flow) should be the first pump stage.
- When several pumps are combined, the torques that occur can reach impermissibly high values.
  - The sum of torques must not exceed the permissible values (see table)
- Combination parts must be listed as separate items on the order.
- The combination parts include the required seals and screws




PV7 frame size	Max. perm. input torque $T_{ m max}$	Max. perm. output torque $T_{\text{out max}}$
10	90	45
16	140	70
25	180	90
40	280	140
63	440	220
100	680	340

## Calculation example:

V = Displacement volume in cm<sup>3</sup>  $\eta_{\text{budr,mech}}$  = Hydraulic-mechanical efficiency

T = Torque in Nm  $\Delta p$  = Pressure in bar

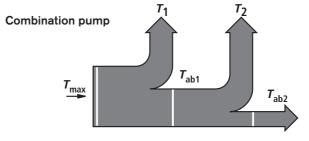

Pump combination: P2V7/25-30... + V7/25-30

Required max. pressure:  $p_n = 160$  bar

$$T = \frac{\Delta p \times V \times 0.0159}{\eta_{\text{hydr-mech.}}}$$
 (Nm)

$$T_{1,2} = \frac{160 \times 30 \times 0.0159}{0.85}$$
 (Nm)

$$T_{1.9} = 90 \text{ Nm} \le T_{\text{off max}}$$

$$T = T_1 + T_2 = 180 \text{ Nm} \le T_{\text{max}}$$

Teh pump combination can be operated on the basis of the calculated data .

## **Combination options**

All pumps of type PV7 can be combined. Each pump with E-shaft is provided with an output spline.


All combinations of a PV7 + optional rear pump are sealed against each other by means of the shaft seal ring of the rear pump. The seal is direction-related. In the case of more strin-

gent requirements with regard to a reliable separation of media, please consult the technical sales department.


Possible combinations and the material no. of the required combination parts can be found in the following table.

Rear pump		Front	pump	
	PV7-1X/ <b>10</b>	PV7-1X/ <b>16/25</b>	PV7-1X/ <b>40/63</b>	PV7-1X/ <b>100</b>
PV7-1X/06RA01M	R900540811	R900540812	R900540814	R900543034
PV7-1X/10RE01M	R900540811	R900540812	R900540814	R900543034
PV7-1X/16RE01M	-	R900540813	R900540815	R900543035
PV7-2X/20RA01M	-	R900540813	R900540815	R900543035
PV7-1X/25RE01M	-	R900540813	R900540815	R900543035
PV7-1X/40RE37M	_	-	R900540816	R900543036
PV7-1X/63RE07M	_	_	R900540816	R900543036
PV7-1X/100RE07M	-	_	-	R900543037
PGF1-2X/RE01VU2	R900857584	R900857585	-	_
PGF2-2X/RJVU2	R900541209	R900541210	R900541203	R900544959
PGF3-3X/RJVU2	-	R900888267	R900880623	R900880624
PGP2-2X/RJ20VU2	R900541209	R900541210	R900541203	R900544959
PGP3-3X/RJVU2	_	R900888267	R900880623	R900880624
PGH2-2X/RRVU2	R900541209	R900541210	R900541203	R900544959
PGH3-2X/RRVU2	R900541209	R900541210	R900541203	R900544959
PGH4-2X/RRVU2	_	-	R900876578	R900876576
PVV/Q1/2-1X/RJ15	-	R900888267	R900880623	R900880624
PVV/Q4/5-1X/RJ15	_	_	R900876023	R900875983
AZPF	R900541209	R900541210	R900541203	R900544959
PR4-1X/0,402,00WG	R900541204	R900541205	R900541206	_
PR4-3X/1,6020,00RG	R900541214	_	-	_
PR4-3X/1,6020,00RA	-	R900541207	R900541208	R900543767
A10VSO10U	R900541209	R900541210	R900541203	R900544959
A10VSO18U	R900541209	R900541210	R900541203	R900544959
A10VO28S	-	R900888267	R900880623	R900880624

## Ordering codes of multiple pumps

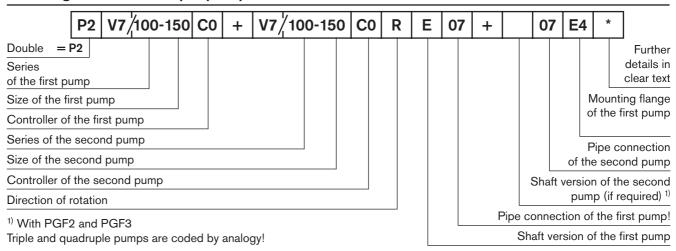


# Pump combination P2V7... + V7/... (nominal dimensions in mm)

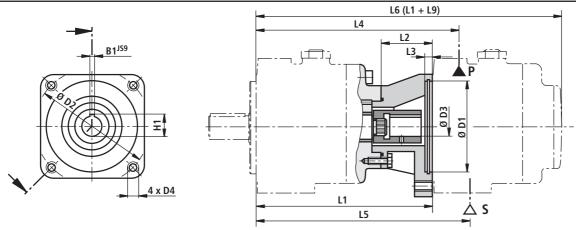

1st pump FS	2nd pump FS	L1	L2	L3	ØD1	ØD2	ØD3	D4	H1	B1	L4	L5	L6
10	06	182	50	8	80	103	20	M8	22.8	6	199	202.5	283
	10	182	50	8	80	103	20	M8	22.8	6	208	208	331
16	06	200	55	8	80	103	20	M8	22.8	6	217	220.5	301
	10	200	55	8	80	103	20	M8	22.8	6	226	226	349
	16	208	63	10	100	125	25	M10	28.3	8	245	245	373
	20	208	63	10	100	125	25	M10	28.3	8	238	233	343
25	06	212	55	8	80	103	20	M8	22.8	6	229	232.5	313
	10	212	55	8	80	103	20	M8	22.8	6	238	238	361
	16	220	63	10	100	125	25	M10	28.3	8	257	257	385
	20	220	63	10	100	125	25	M10	28.3	8	245	245	354
	25	220	63	10	100	125	25	M10	28.3	8	254	258	397
40	06	221.6	55	8	80	103	20	M8	22.8	6	238.6	242.1	322.6
	10	221.6	55	8	80	103	20	M8	22.8	6	247.6	247.6	370.6
	16	229.6	63	10	100	125	25	M10	28.3	8	266.6	266.6	394.6
	20	229.6	63	10	100	125	25	M10	28.3	8	254.6	254.6	363.6
	25	229.6	63	10	100	125	25	M10	28.3	8	263.6	267.6	406.6
	40	246.6	80	10	125	160	32	M12	35.3	10	273.1	289.6	433.2
63	06	244.5	55	8	80	103	20	M8	22.8	6	261.5	265	345.5
	10	244.5	55	8	80	103	20	M8	22.8	6	270.5	270.5	393.5
	16	252.5	63	10	100	125	25	M10	28.3	8	289.5	289.5	417.5
	20	252.5	63	10	100	125	25	M10	28.3	8	277.5	277.5	386.5
	25	252.5	63	10	100	125	25	M10	28.3	8	286.5	290.5	429.5
	40	269.5	80	10	125	160	32	M12	35.3	10	296	312.5	456.1
	63	269.5	80	10	125	160	32	M12	35.3	10	308.5	320.5	480.5
100	06	276.5	55	8	80	103	20	M8	22.8	6	293.5	297	277.5
	10	276.5	55	8	80	103	20	M8	22.8	6	302.5	302.5	425.5
	16	284.5	63	10	100	125	25	M10	28.3	8	321.5	321.5	449.5
	20	284.5	63	10	100	125	25	M10	28.3	8	309.5	309.5	418.5
	25	284.5	63	10	100	125	25	M10	28.3	8	318.5	322.5	461.5
	40	301.5	80	10	125	160	32	M12	35.3	10	328	344.5	488.1
	63	301.5	80	10	125	160	32	M12	35.3	10	340.5	352.	515.5
	100	321.5	100	10	160	200	40	M16	47.3	12	367	382	563.5

# Pump combination P2V7... + GF2 / GP2 / GH2 / GH3 / AZPF / A10VSO (nominal dimensions in mm)

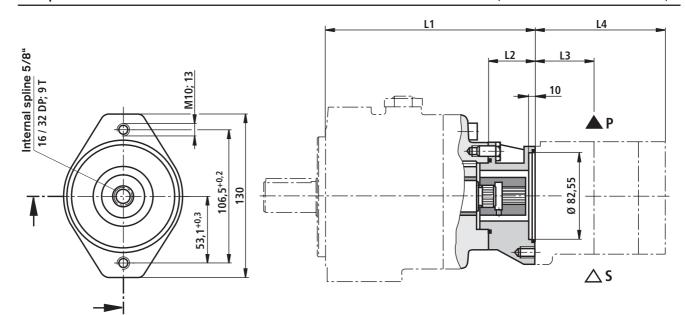

PV7 frame size	L1	L2
10	168	36
16	192	47
25	204	47
40	213.6	47
63	236.5	47
100	268.5	47

PGF2/PGP2 size	L3	L4
006	65	116
008	67	119.5
011	69.5	125
013	72	130
016	74.5	135
019	77.5	141
022	80.5	147
	•	

PGH2 size	L3	L4
003	51	102.5
005	54	110
006	55.5	112.5
800	57	116

PGH3 size	L3	L4
011	60	121.5
013	62.5	126.5
016	65	131.5


L3	L4
40	85
41	87.5
43	91 .5
47	96.5
47.5	101 .5
47.5	105
47.5	110
55	115.5
	40 41 43 47 47.5 47.5 47.5

A10VSO size	L3	L4
010	148 <sup>1)</sup>	164; 179 <sup>2)</sup>
018	145	195

<sup>1)</sup> Pipe connections axial

<sup>&</sup>lt;sup>2)</sup> Depending on contoller (see RE 92713)

# Pump combination P2V7... + GF3 / GP3 / VV1 / VV2 / GH4 / A10VO28 (nominal dimensions in mm)

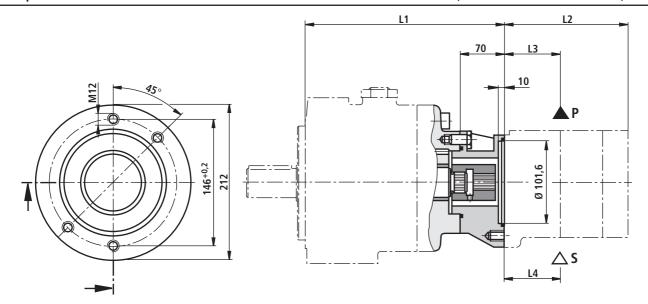

PV7 frame size	L1
16	215
25	227
40	237
63	259.5
100	291.5


PGF3/PGP3 size	L2	L3;L4
020	144.5	79.5
022	146.5	80.5
025	150.5	82.5
032	159.5	87
040	169.5	92
050	182.5	98.5

PGH4 size	L2	L3,L4
020	147	70.5
025	152	73
032	159	76.5
040	166	80
050	176	85
063	190	92
080	204	99
100	224	109


PVV.UMB	L2	L3 (P)	L4 (S)
PVV1	156	133	63.5
PVV2	163	38.1	120.6

A10VO size	L2	L3	L4
028	194	164.5	164.5


# Pump combination P2V7/63... + VV4 / VV5 (nominal dimensions in mm)

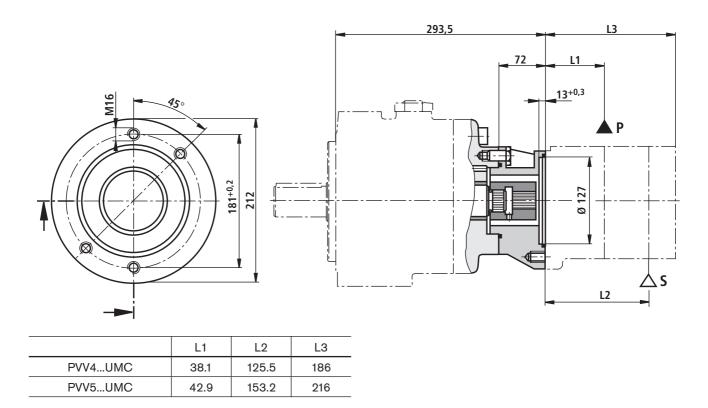

# Pump combination P2V7/100... + VV4 / VV5 (nominal dimensions in mm)

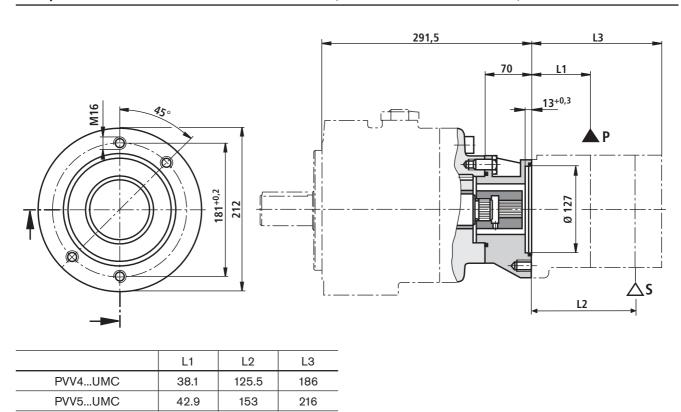


# Pump combination P2V7... + GF1... (nominal dimensions in mm)

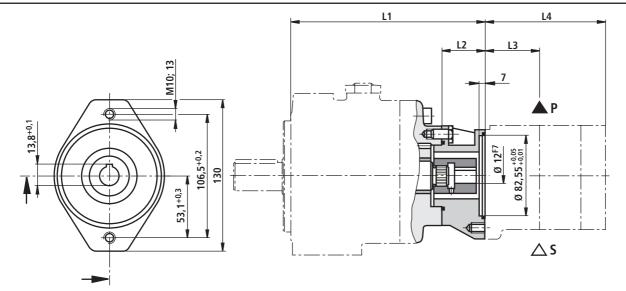

PV7 frame size	L1	L2
10	168	36
16	192	47
25	204	47

GF1 size	L3	L4
1.7	8.6	86
2.2	48.6	86
2.8	49.7	88.6
3.2	50.5	89.9
4.1	52.4	93.6
5.0	54.2	97.3

# Pump combination P2V7... + PR4-Mini (nominal dimensions im mm)

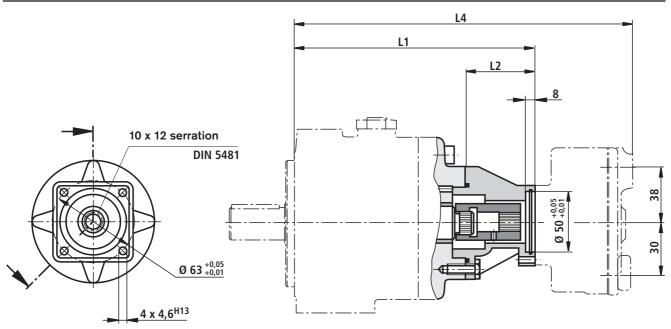



PV7 frame size	L1	L2	L4
10	178	46	247
16	208	63	277
25	220	63	289

PV7 frame size	L1	L2	L4
40	229.6	63	298.6
63	252.5	63	321.5
100	284.5	63	353.5

Note: The suction port of PR4 should be located above the pressure port!


# Pump combination P2V7... + PR4 standard (nominal dimensions in mm)

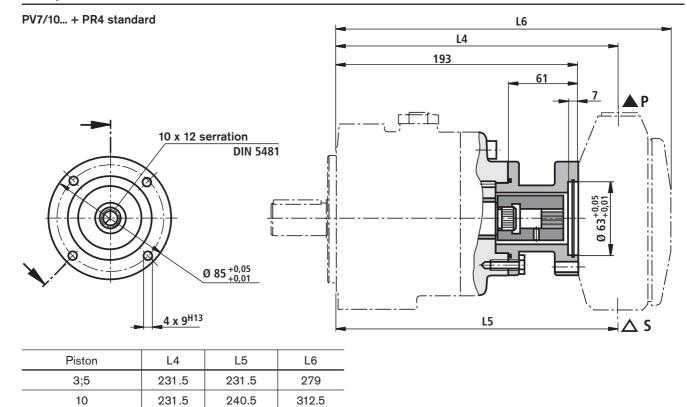

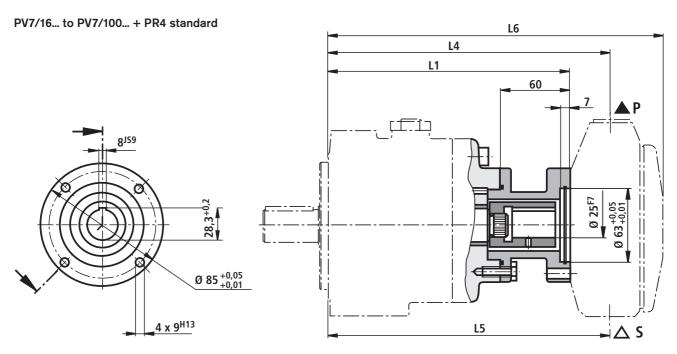

PV7 frame size	L1	L4		L	5	L6		
		3/5 pistons	10 pistons	3/5 pistons	10 pistons	3/5 pistons	10 pistons	
16	205	243.5	243.5	243.5	252.5	291	324.5	
25	217	255.5	255.5	255.5	264.5	303	336.5	
40	226.6	265.1	265.1	265.1	274.1	312.6	346.1	
63	249.5	288	288	288	297	335.5	369	
100	281.5	320	320	320	329	367.5	401	

# SAE connection flanges, max. operating pressure 210 bar (3000 PSI)

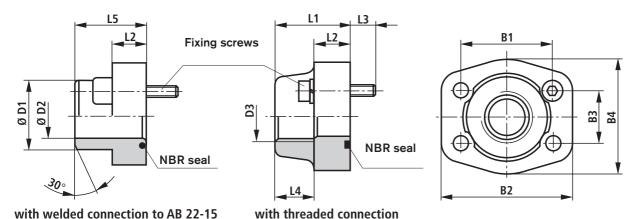

The material nos. include the flange, the O-ring and the fixing

Pipe thread "G" to ISO 228/1

		Mater	rial no.	For pump type			
Size	Seal material	Welded connection	Threaded connection	Suction port	Pressure port		
1 1/4	NBR	R900012946	R900014153	-	PV7/63		
1 1/2	NBR	R900013501	R900014827	PV7/40	PV7/100		
2"	NBR	R900013502	R900014829	PV7/63	-		
2 1/2"	NBR	R900013503	R900024205	PV7/100	-		

Size	B1	B2	ВЗ	B4	D1	D2	D3	L1	L2	L3	L4	L5	Fixing screws
1 1/4	58.7	79	30.2	68	38	30	G1 1/4	41	21	18	22	42	M10-8.8
1 1/2	69.9	95	35.7	76	42	36	G1 1/2	44	25	18	24	57	M12-8.8
2"	77.8	102	42.9	90	61	49	G2	45	25	18	26	46	M12-8.8
2 1/2"	88.9	114	50.8	104	76	62	G2 1/2	50	25	18	30	50	M12-8.8

## **Engineering notes**

Comprehensive notes and suggestions can be found in The Hydraulic Trainer, Volume 3, RE 00281, "Planning and design of hydraulic systems".

When using vane pumps, we recommend that the following notes are observed in particular:

## - Technical data

All technical data mentioned depend on manufacturing tolerances and are valid under certain boundary conditions. Please note that small tolerances are therefore possible and that different boundary conditions (e.g. viscosity) can also result in changes in the technical data.

#### - Characteristic curves

Characteristic curves for flow and absorbed power. Please take the possible maximum operating data into account when dimensioning the drive motor.

## - Noise/sound pressure level

The sound pressure level values given on pages 6 to 11 were measured in accordance with DIN 45635 part 26.

This means that only the sound emission of the pump is shown. Ambient influences (such as place of installation, piping, etc.) were eliminated. The values are valid for only one pump.

If, for example, two pumps of the same frame size are operated under the same load conditions, the noise level increases according to the following formula:

$$L_{\Sigma} = 10 \text{ lg } (10^{0.1 \cdot \text{L}1} + 10^{0.1 \cdot \text{L}2})$$

 $L_{\Sigma}$  = Total noise level

 $L_1 \dots L_i =$  Sound pressure level of the individual pump

Example: PV7/16 + PV7/16

 $p = 120 \, \text{bar}$ 

 $L_1 = 56 \, dB(A)$ 

 $L_2 = 56 \, dB(A)$ 

 $L_{\Sigma} = 10 \log (10^{0.1 \cdot 56} + 10^{0.1 \cdot 56})$ 

= 59.01 dB(A)

## **Engineering notes**

#### Caution

The power unit design and influences at the final place of installation of the pump result in the fact that the sound pressure level is usually 5 to 10 dB(A) higher than the value of the pump alone.

#### Leakage oil

The external leakage fluid of the pump dissipates a part of the frictional heat. The leakage fluid should be directed with low line resistance directly into the tank. The distance between the leakage line and the suction line must be sufficiently large so that the returning leakage fluid **cannot** be directly re-aspired. The flow of average, external leakage is shown on page 5. These values must not be used for dimensioning the tanks. The relevant variable for the selection of the tank size is the zero stroke power (see pages 7 to 12).

#### Leakage fluid cooler

The values for external leakage fluid given on page 6 are average values that are valid for continuous operation.

When the pump goes off stroke, the leakage fluid volume briefly increases due to the pilot fluid of the controller. Reductions in cross-sections, long leakage lines, or also leakage fluid coolers can lead to impermissibly high pressure peaks. Suitable measures, e.g. a check valve in the by-pass must prevent the leakage fluid pressure ( $p_{\rm max}=2$  bar) from exceeding the permissible values. Otherwise, the shaft seal ring could be damaged.

## **Commissioning notes**

#### **Bleeding**

- All vane pumps of type PV7 are self-priming.
- Before initial commissioning, the pump must be bled in order to protect it against damage.
- We recommend that the housing be filled via the leakage port for initial commissioning. Observe the filter rating! This increases the operational reliability and prevents wear under unfavourable installation conditions.
- Should the pump not displace bubble-free oil after approx.
   20 s, check the system again. After the operating values have been reached, inspect the pipe connections for leakage and check the operating temperature.

#### Commissioning

- Check that the system has been properly and thoroughly assembled.
- Observe the direction-of-rotation arrows of the motor and the pump.
- Let the pump start up under no-load conditions and let it displace fluid at zero pressure for some seconds in order to provide sufficient lubrication.
- In no case may the pump be operated without fluid!


#### Important notes

- Adjustments, servicing and repairs of the pump may only be carried out by authorised, trained and instructed personnel!
- Use only genuine spare parts of Bosch Rexroth!
- The pump may only be operated with the permissible data.
- The pump may only be operated when in perfect condition!
- When carrying out any work on the pump (e.g. installation or removal), the system must be de-energised and de-pressurised!
- Unauthorised conversions or changes to the system, which affect safety and function, are not permitted!
- Fit protective equipment (e.g. coupling guard)!
- Do not remove any existing protective guards!
- Strictly observe generally valid safety regulations and regulations for the prevention of accidents!

## Installation notes

## Drive

El. motor + pump mounting bracket + coupling + pump




#### Caution!

- Radial and axial forces acting on the pump drive shaft are not permitted!
  - → Motor and pump must be exactly aligned
  - → Use a flexible drive coupling

#### Installation notes

#### Installation positions

- Horizontal position preferred

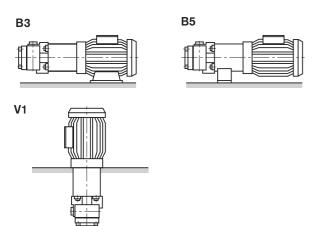

#### Fluid tank

Adapt the useful capacity of the tank to the operating conditions.


#### Caution!

- The permissible fluid temperature must not be exceeded → if required, provide cooler!

#### Lines and connections

- Cut off at an angle of 45°.
- Remove protective plug from the pump.
- We recommend the use of seamless precision steel pipes according to DIN 2391 and removable pipe connections.
- Select the clear width of the pipes according to the ports.
- Thoroughly clean all pipes and fittings before installing them.
- Minimum distance to the tank bottom 120 mm
- Lay the leakage line so that the pump can **not** drain!
- Do not pipe a pump without controller!
- Leakage and return flow fluid must under no circumstances be directly re-aspired!

Piping suggestions (nominal dimensions in mm)

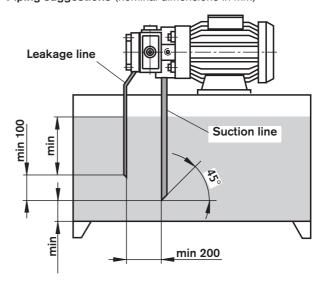

#### **Filters**

 Whenever possible, use return flow or pressure filters.
 (Suction filters only in conjunction with underpressure switch / clogging indicator)

## Hydraulic fluid

- Please observe our regulations according to data sheet RE 07075.
- We recommend the use of brand name hydraulic fluids.
- Different hydraulic fluid types must not be mixed, since this can result in decomposition and a deterioration of the lubricating properties. Observe the manufacturer's information!
- The fluid must be changed at regular intervals according to the operating conditions. In this context, the fluid tank must be cleaned from residues.

Bosch Rexroth AG
Hydraulics
Zum Eisengießer 1
97816 Lohr am Main, Germany
Phone +49 (0) 93 52 / 18-0
Fax +49 (0) 93 52 / 18-23 58
documentation@boschrexroth.de

www.boschrexroth.de

© This document, as well as the data, specifications and other information set forth in it, are the exclusive property of Bosch Rexroth AG. It may not be reproduced or given to third parties without its consent.

The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.

## **Notes**

© This document, as well as the data, specifications and other information set forth in it, are the exclusive property of Bosch Rexroth AG. It may not be reproduced or given to third parties without its consent.

The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.

## **Notes**

© This document, as well as the data, specifications and other information set forth in it, are the exclusive property of Bosch Rexroth AG. It may not be reproduced or given to third parties without its consent.

The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.